



Nr.	Betegnelse
A01	Hoveddynamo
A02	Banemeter
A03	Maksimalafbryder
A04	Sikring for Banemeter
A07	Reguleringskontrol
A08	Koreretningskontrol
A10	Reguleringsmodstand
A16	Fellsvækningsmodstand 1. Trin
A17	" " " " 2. " "
A21	Amperemeter for Hoveddynamo
A22	Skudt for -do-
A31	Omskifter for Magnetiseringsstrøm
A32	Sikring " " " "
A34	Afbryder for Manøvrerstrøm
A35	Sikring " " " "
A26	Voltmeter for Hoveddynamo
A28	Sikring " " " "
B01	Magnetiseringsdynamo
B02	Ladedynamo
B03	Akkumulatorbatteri
B04	Modstand
B10	Sikring for Ladedynamo
B15	Amperemeter for Ladedynamo
D01	Startafbryder
D02	Trykknop for Start
D18	Startemeter
E02	Hovedafbryder for Lys
E03	Sikring for Lys
E06	Lyskaster
E07	Afbryder for -do-
E09	" " " " ; dæmpet lys
E10	Toplanterne
E11	Afbryder for -do-
E14	Lampe paa Forebræds
E15	Afbryder for -do-
E18	Stikkontakt
F02	Bremserelæ
F06	Trykknop til Fodpedal
F11	Signalhorn
F12	Trykknop for -do-

FOBANDRINGER  	MALESTOK TEGN KRL REV. DATO 15.10.37
	TEGNING NR. <b>8343-01</b>
A/S FRICHS AARHUS Hovedstrømskema <small>1/25 N.Y. over et 12 volt system</small> <small>Lolland Falster 10</small>	